

INSTALLATION GUIDE:

BMW E38 99-01 HID TYPE 7 Series 1PC Halo Amber Projector Headlights

For more information about how to install your vehicle, come visit our youtube page on

<http://www.youtube.com/spyderauto>

SPYDER


Parts Identification:		TOOLS REQUIRE	
Projector Headlight		10mm - 8mm socket	
Halo & L.E.D.		Philip Screw- driver	
Bottom of the Headlight: Ballast Bracket, Halo Wires(red/black)	 <p>Xenon Light Ballast Bracket</p>	Crimper/ Pliers	
Turn Signal Adaptor			

STEP:


Remove the factory headlight from the BMW. First remove the front panel cover below the headlight to access the bottom screw of the headlight housing. There is also two screws on the top of the housing.



Once you have remove the headlight, turn the headlight around and remove the bracket that holds the Ballast. Then remove the ballast using a philip screwdriver.

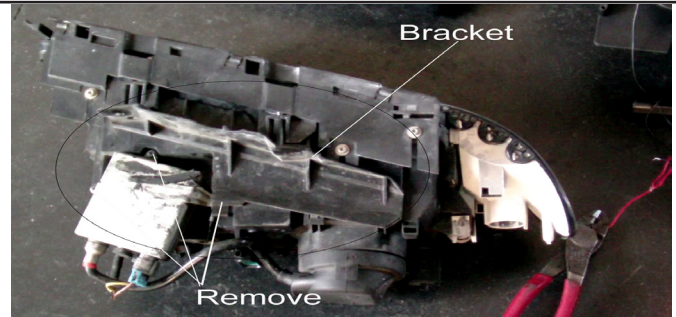

Unplug the wire from the ballast, and then remove the Xenon Plug from the housing. Put the Ballast aside.

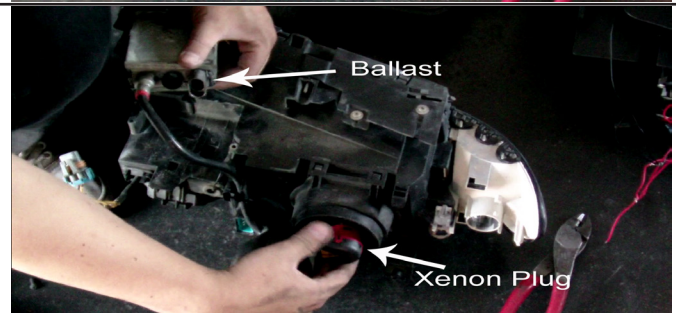

Carefully remove the D2S Xenon Bulb from the factory housing. Once you have remove the bulb, transfer the bulb to the Spyder headlights.



Remove the bracket from the Spyder Headlight, and then install the ballast on the housing like the original. Once you have put the ballast on, put the bracket back on.



Remove the Panel Cover bracket from the original headlight to the new Spyder Headlights as shown here.




STEP:

Install the Spyder turn signal socket if the original does not fit, unplug the factory plug from the harness and plug the new one on.



Install the Spyder Headlight back on to the vehicle. Plug the Harness back on, the halo/L.E.D. Wires is connect to the Parking lights. These wires are optional to your vehicle, you do not have to wire them together.

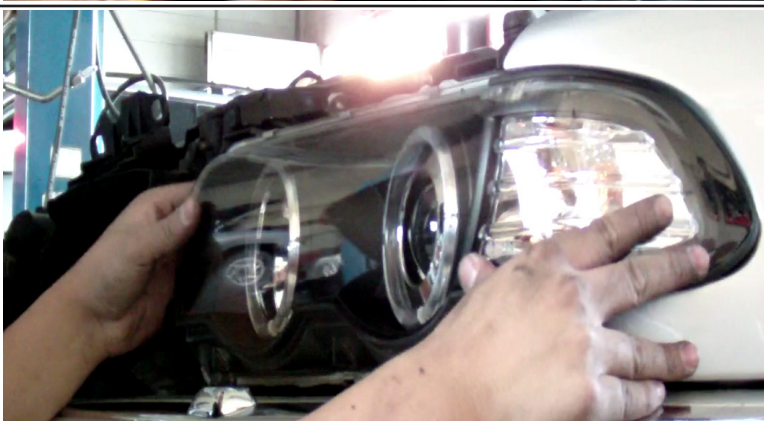

Factory Xenon Headlight



Spyder Projector Headlight using Factory Xenon Lights

SPYDER

www.spyderauto.com